

# Assembly Instructions Flat Pack Hanger Stacker

Morplan Order Code **81141**


## Parts List

- A – 2 x Single Poles
- B – H shape base with integrated wheels
- C – U shape handle with 2 Allen key bolts  
1 x Allen Key (not shown)




## Step One

Screw in the single poles **A** into the position holes on the cross section of the base. These should be screwed in hand tight.

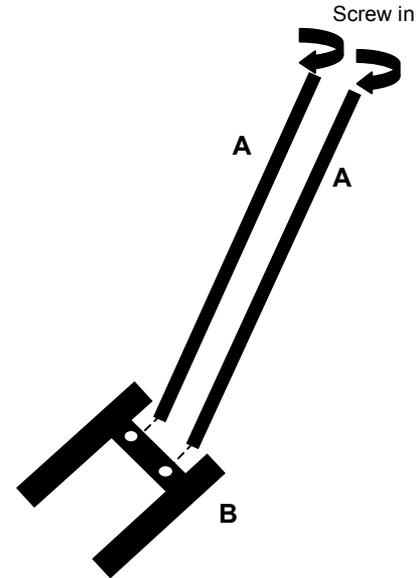

## Step Two

Unscrew and remove the bolts from the U shape handle **C**. Position the handle **C** over the raised guides on the H shape base **B**. Press down firmly into place, tap onto the floor (if necessary) to ensure the U shape handle **B** is firmly in place.

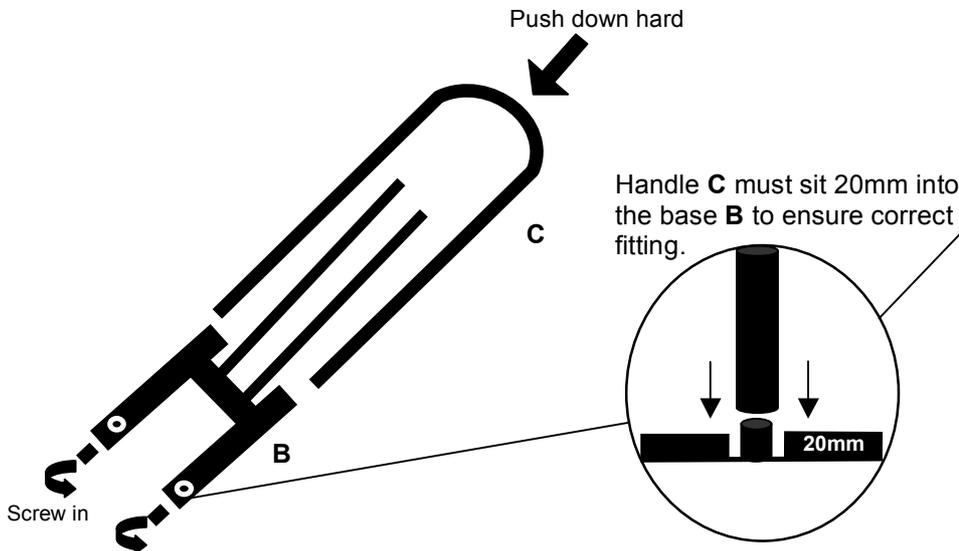

## Step Three

Gently lay the stacker onto its side and using the Allen Key and bolts, firmly push the U Shape Handle **C** onto the H Shape Base **B** whilst pushing firmly, screw in the bolts into the base from the underside.



If you have any further queries call our Customer Services Department on

**Freefone 0800 435 333**